




# INSTALLATION INSTRUCTIONS MANUAL

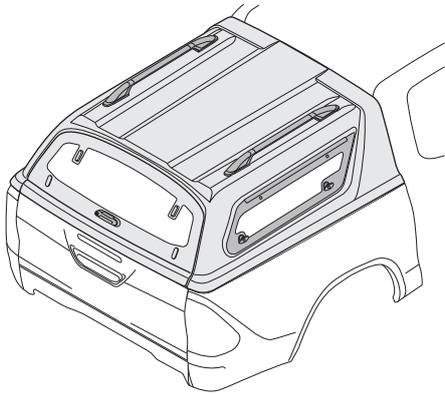

### Caution for installation

Read this mounting manual carefully, before you start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name	MAXTOP S.III WITH CENTRAL LOCK
Model name	TOYOTA 640A DBC 2015+
Inst. number	L04-0417

### Component parts

<p>1</p> <p>x1</p>	<p>2</p> <p>x4</p>	<p>3</p> <p>x4</p>	<p>4</p> <p>x4</p>
	<p>5</p> <p>x8</p>	<p>6</p> <p>x8</p>	<p>7</p> <p>x8</p>
<p>8</p> <p>x4</p>	<p>9</p> <p>x2</p>	<p>10</p> <p>x1</p>	<p>11</p> <p>x2</p>
		<p>12</p> <p>x6</p>	

### Tools used









<p>No.12</p>	<p>No.5</p>	<p>No.12</p>		
<p>Silicone/Polyurethane</p>	<p>Methyl alcohol 100%</p>	<p>Cloth</p>		





Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi,20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com








# Instruction procedure without bed liner

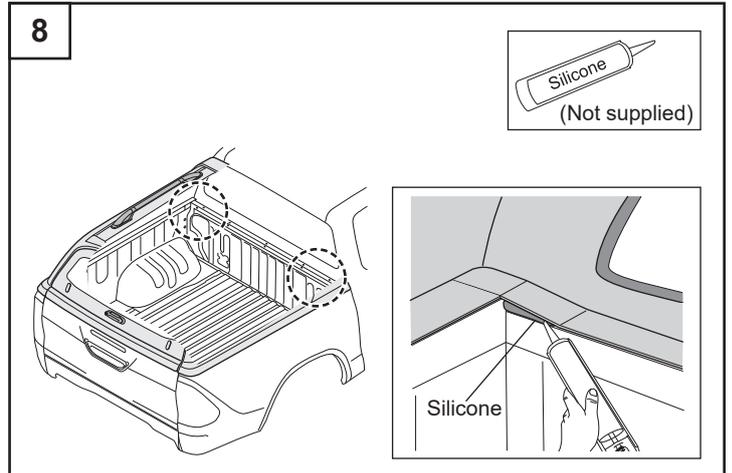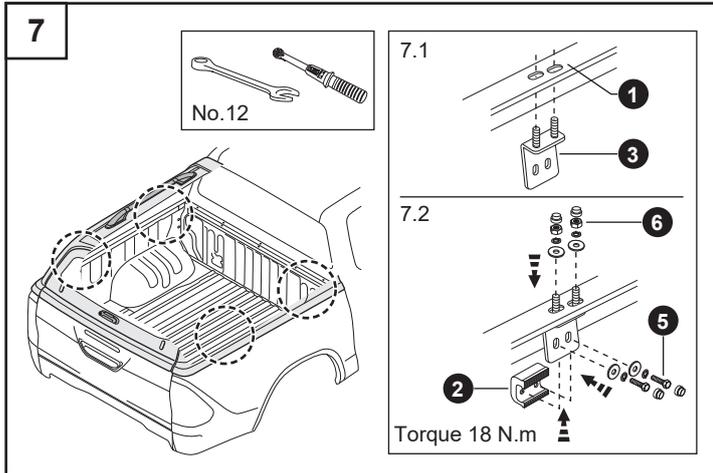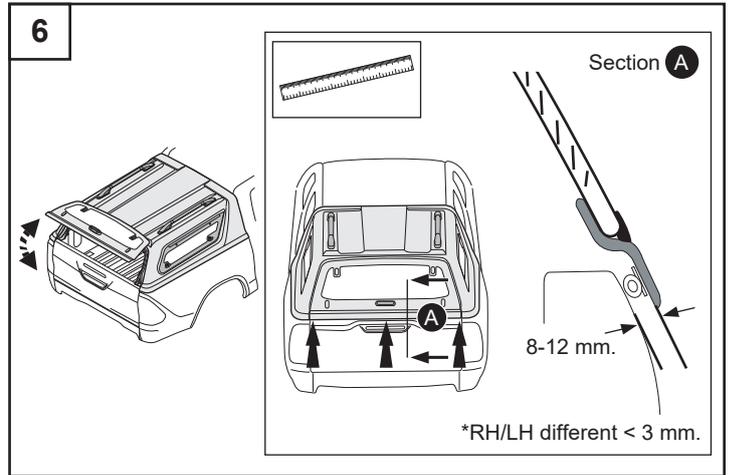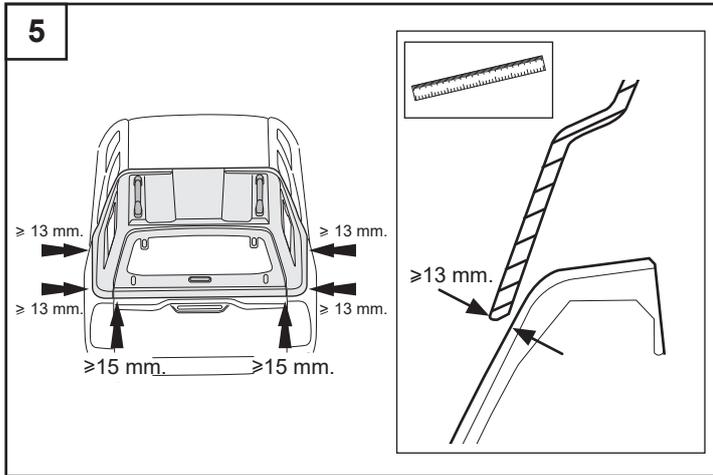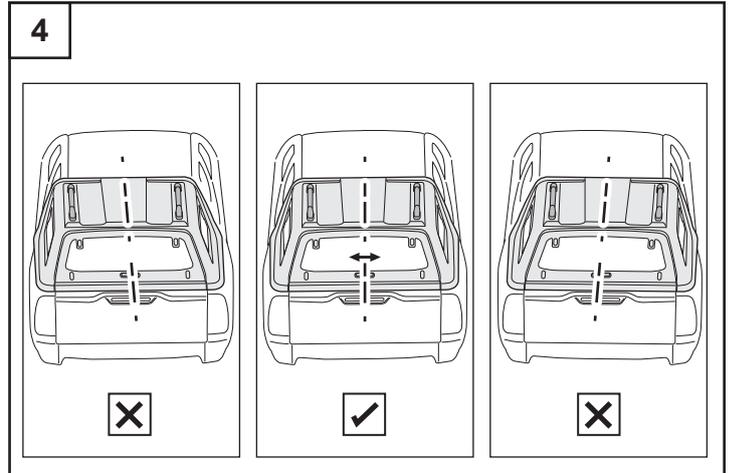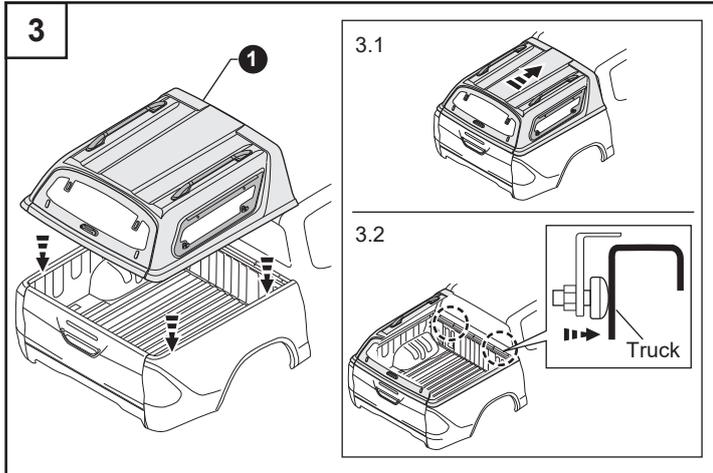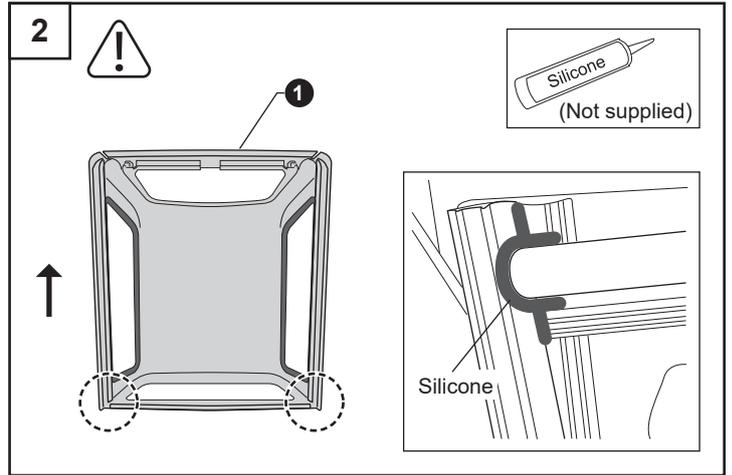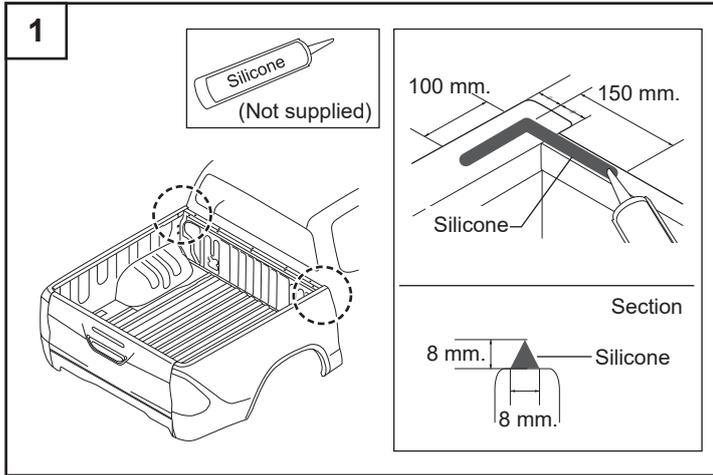







**Instruction procedure without bed liner**

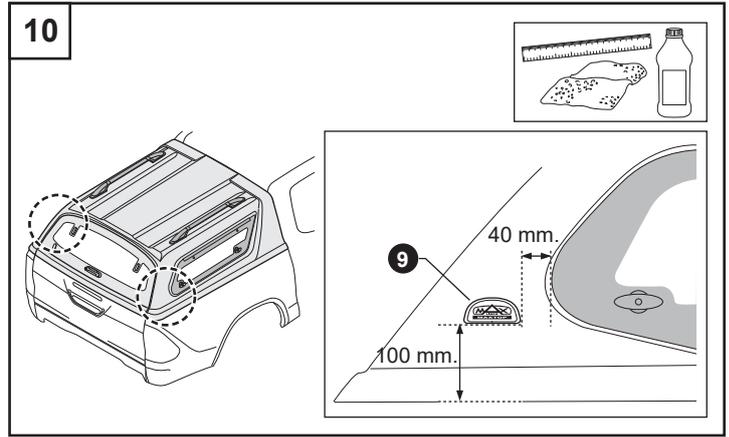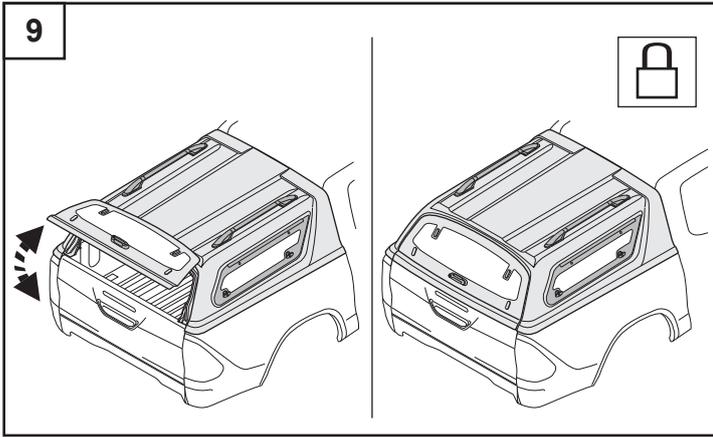

**Instruction procedure with bed liner**

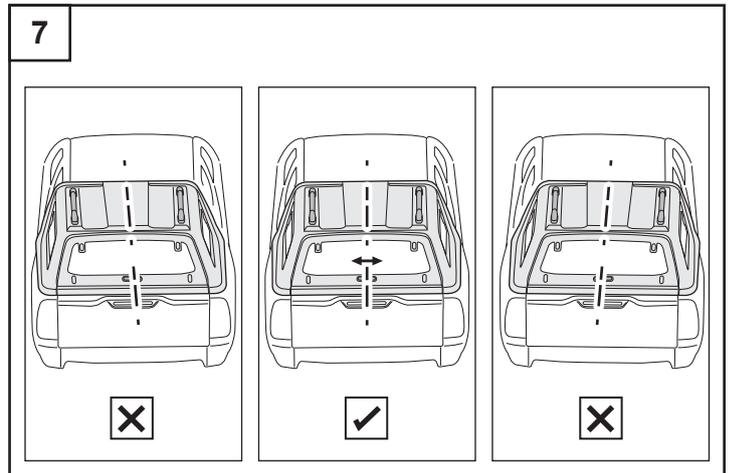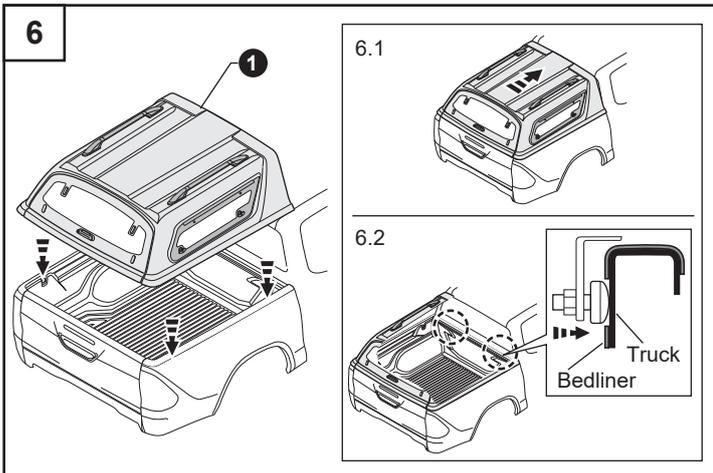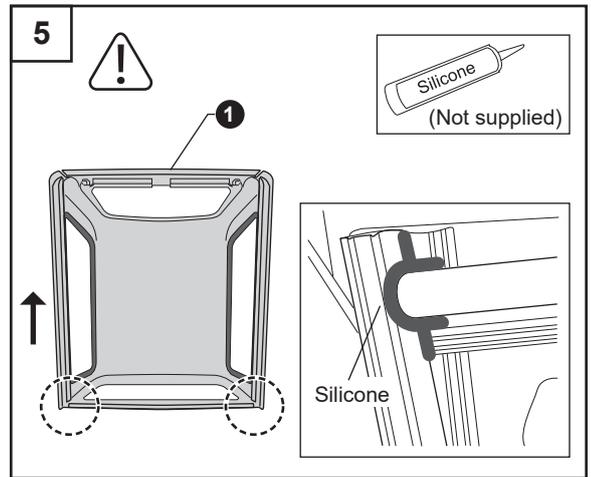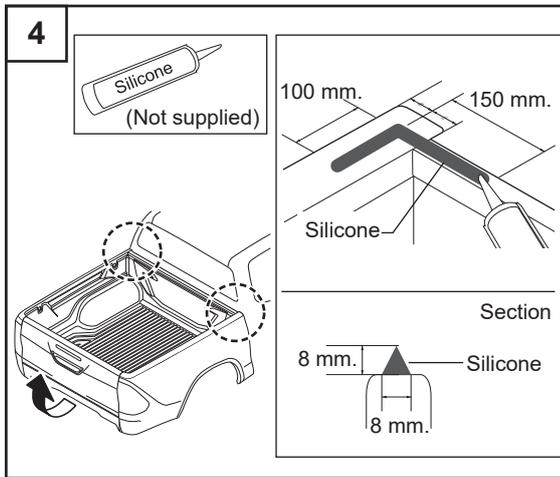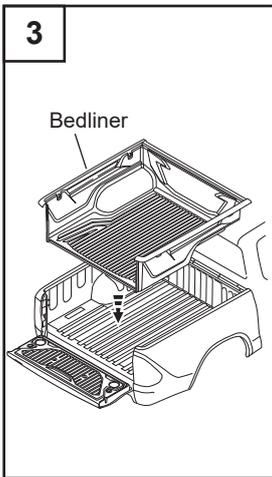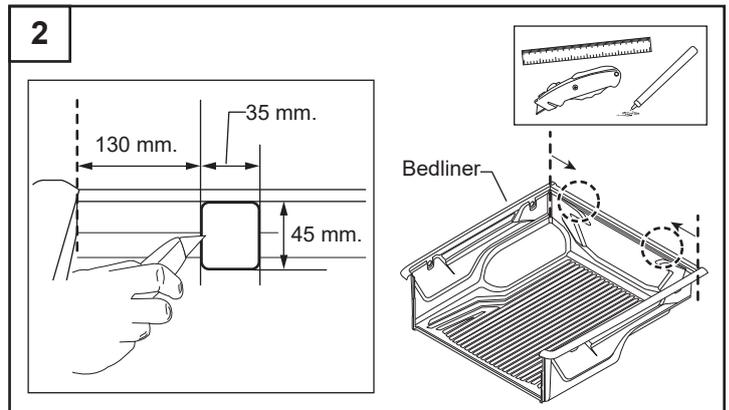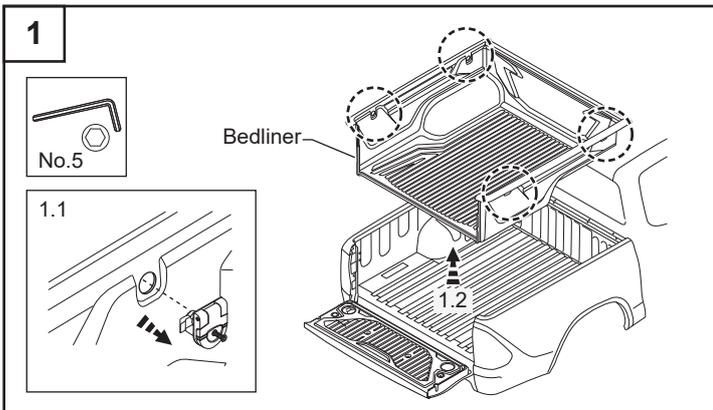


— Instruction procedure with bed liner —

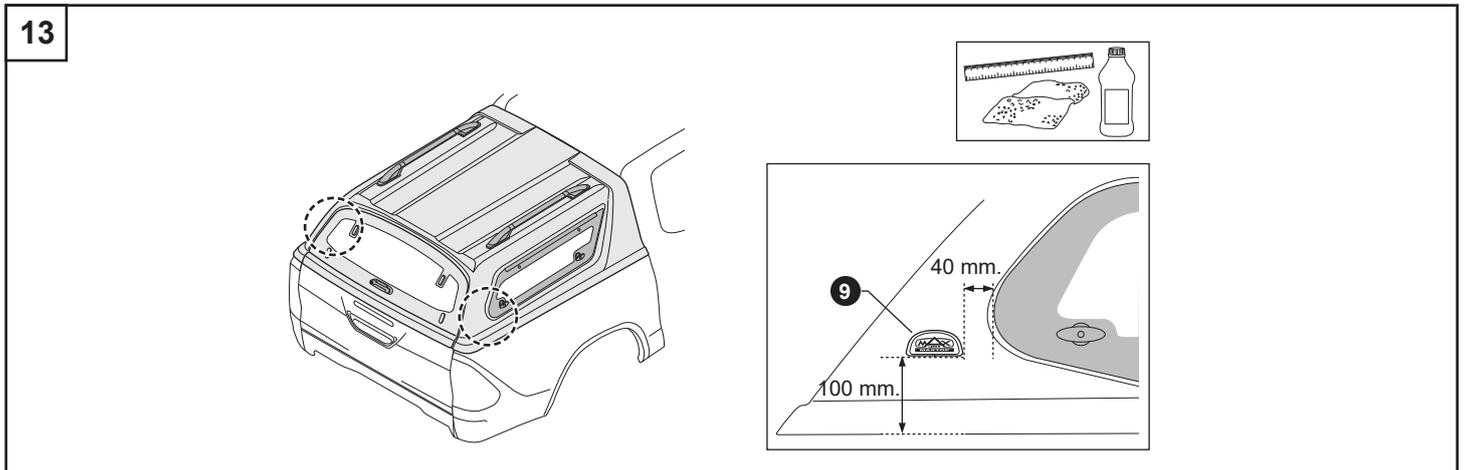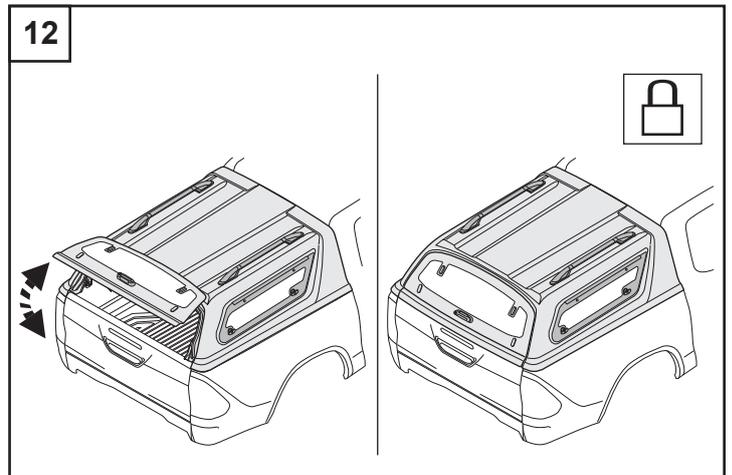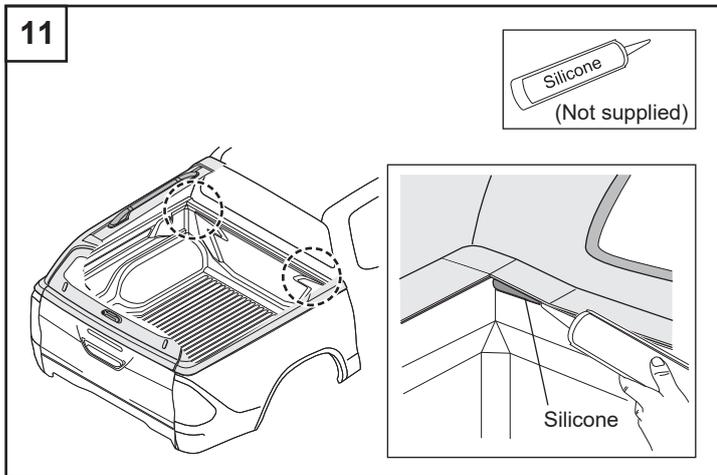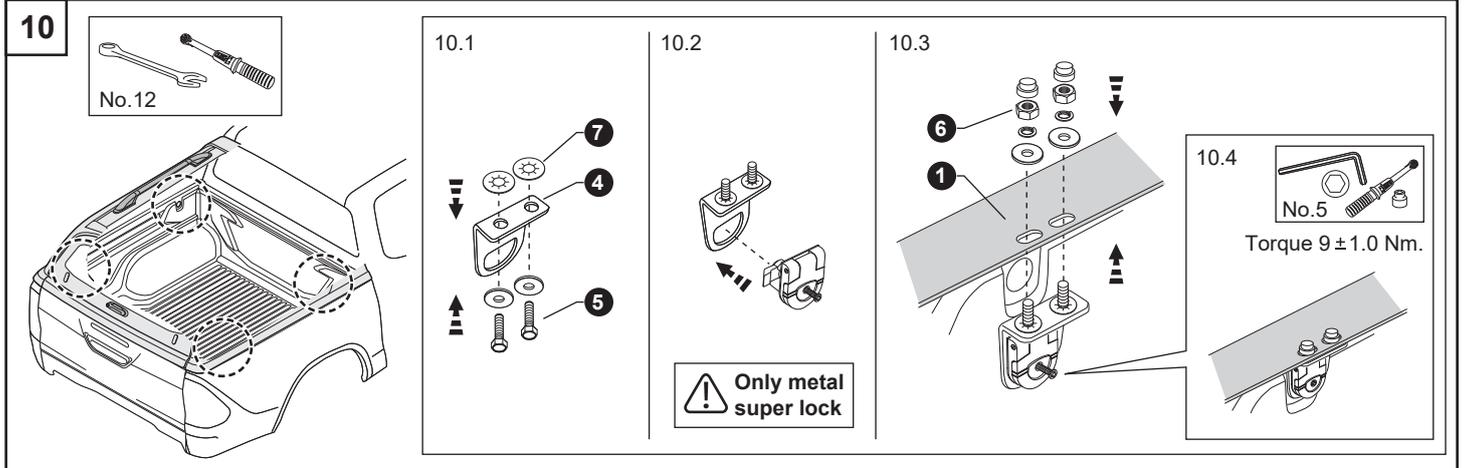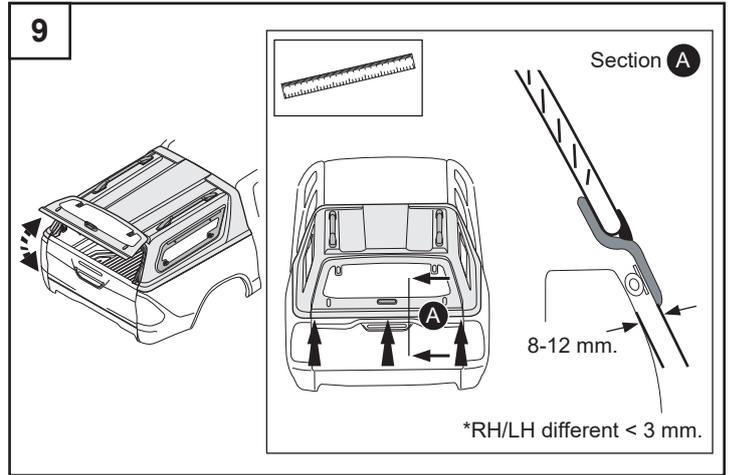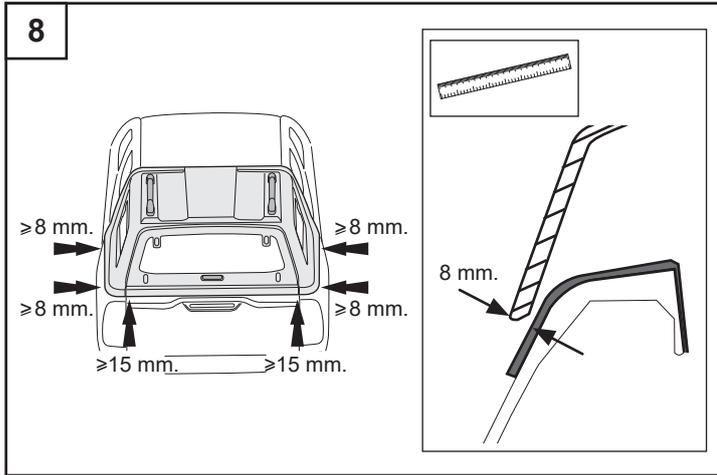

—Instruction procedure —

**NOTE : ROOM LAMP**

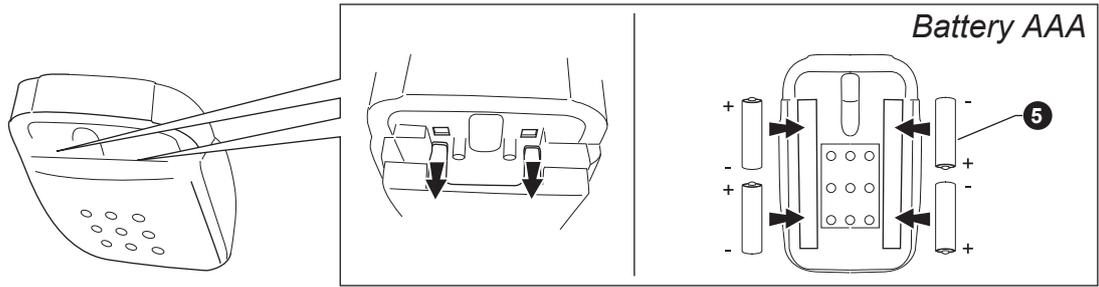

—Instruction procedure cord set —

